 




DID46KSKM

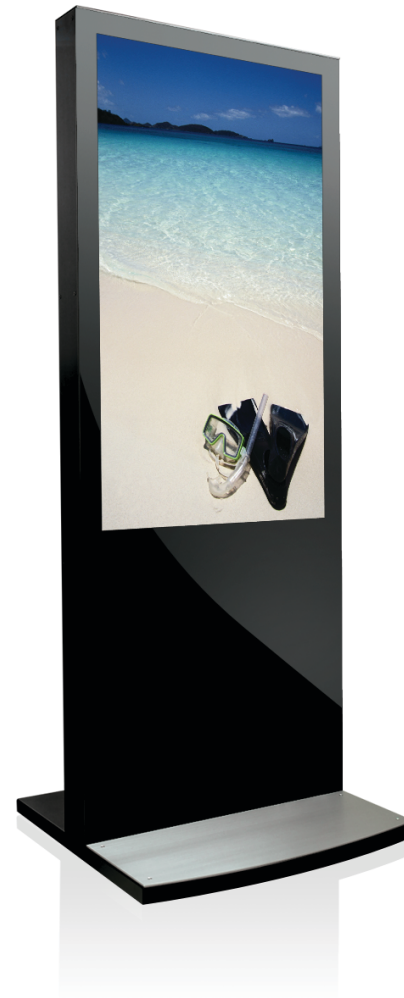

Doublesight Displays
www.doublesight.com
877-TWO-LCDS

CONTENTS

CONTENTS	1
Directions for safety	2

1. Preparation

Package Contents	4
Specification of products	5
Location And function of Features	6

2. Product information

Remote Control Functions	7
Basic Set Up	8

3. Management information of products

Content	9
Firmware upgrade	11

Directions for safety



Ignoring the safety precautions may lead to accidents causing injury or fatality and structural damage.

Cautions are categorized into two types, "Warning" and "Caution" depending on their level of importance.




Warning : May lead to accidents causing serious human injury



Caution : May lead to minor accidents and damage

Do not use a damaged power cord or plug, or connect to a loose power outlet. Doing so may cause electric shock or fire.

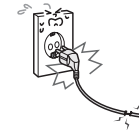


Warning

Do not pull the power cord when unplugging the power, and do not touch the power plug with wet hands. Doing so may cause electric shock or fire.



Warning

Connect the power plug to grounded power outlets only. Failure to do so may cause electric shock or injury.

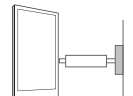


Warning

Insert the power plug securely into the outlet. Insecure and unstable electrical contact may lead to fire.




Warning

Do not bend the power cord excessively or allow the cord to be compressed under a heavy object. Doing so may cause electric shock or fire.

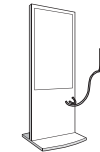

Warning

Do not connect more than one plug to a single wall outlet. Doing so may lead to fire.

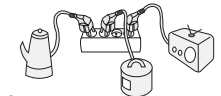


Warning

Provide sufficient space between the monitor and the wall for ventilation (cooling). Overheating may lead to fire.



Warning

Make sure that the ventilation holes are not covered by fabrics, curtains, other clothes like material, etc.

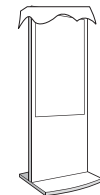

Warning

Directions for safety



Set the PC to activate power save mode (DPMS) when the monitor is not used for a while. Set the screen saver function and select a type that maintains motion in the whole screen.

Do not insert metallic objects into the ventilation holes. They may cause electric shock or fire.




Do not allow children to climb onto the product or hang on it. The product may fall over and cause serious injury.



Do not attempt to dismantle, repair, or modify the product yourself. This may cause fire or electrical failures.



Unplug the monitor when not using for a long period of time. Dust build-up on the product (near the vents) may cause overheating and lead to fire. Use a dry soft cloth for cleaning purposes.

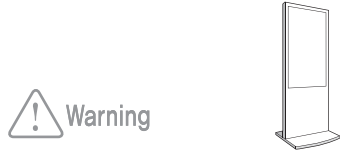

Carefully unplug the monitor if you see any signs of smoke or smell odor of burning. Contact the manufacturer for further information.




Use a soft dry cloth to clean the monitor, and unplug it before cleaning.

Do not use any chemical solutions on the monitor for cleaning purposes. Do not use a wet cloth on the monitor.



Do not spray water directly onto the product. It may cause electrical faults or fire.

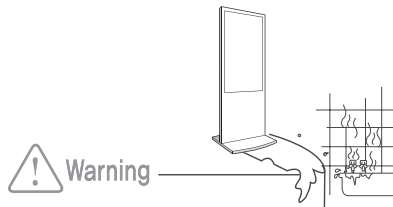


Do not install the monitor where water (rain) drops can enter the enclosure, or where there is oil or humidity.

It may cause electrical faults, fire, or lead to damage to the monitor.



Clean any dirt, dust or water from the power plug contacts.

They may cause electrical faults or fire.

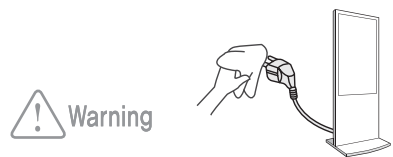

Package Contents

1. Remote control



2. Battery




3. Power cord



4. Installation CD



5. Manual

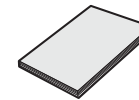

Directions for use of remote control

- ▶ Corrosion from old batteries can cause remote to malfunction
- ▶ Use with clear path between remote and remote control sensor on display
- ▶ Keep remote away from physical damage
- ▶ Please use caution when handling or disposing of battery cells, small objects can cause choking hazard in children

Specification of products

Panel	Screen size		46"
	Resolution		768 x 1366
	Display Colors		16.7M - 8Bit
	Luminance of white		700 cd/ m ² (Typ)
	Constrast ratio		2000 : 1
	Response time		8ms
	Viewing Angle		(+)178' ~ (-) 178'
Audio	Sound		Stereo Sound
	OUTPUT Power		2W
Interface	Input		USB2.0
Power	Power consumption		170W
System	O/S		uCLinux
Supported	Video		AVI (Codec : MPEG 1/2/4, Xvid, Dvix)
	Sound		AC3, MP3
	Photo		JPEG
Environ ment	Operating	Temperature Humidity	0' ~ 50'
			20~90% (Non-condensing)
	Storge	Temperature Humidity	-20' ~ 60'
			5~90% (Non-condensing)
Additional	Storge (Memory)		1G (Default)
	Others		Photo Sensor

Location and Function of Features



<Speaker>

Only audio included in movie
available, AC3 codec
Audio file is not available.

[Option]



<AC power socket >

Insert Power cord and connect power.



<Power switch>

Power On/Off.




<USB socket >

Insert USB device and upload contents .



Remote control functions

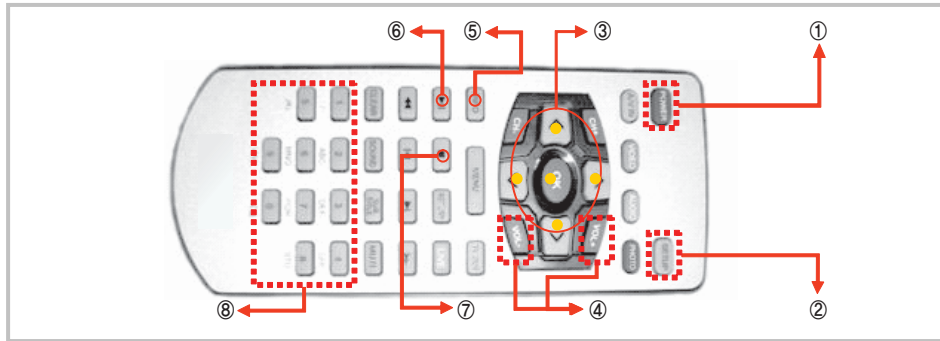


- ① **POWER** Power ON/OFF.
- ② **SETUP** Display OSD menu
 - ※ In Play/Pause mode, the order is BRIGHTNESS → CONTRAST → SATURATION.
 - In Stop mode, displays network setup menu.
- ③ **△, ▽, <, >, OK** In OSD menu, moves menu bar and confirms
- ④ **VOL “-”, “+”** Controls volume & screen setup (Adjusts menu values displayed on SETUP)
 - ※ In movie & image play mode, adjusts Volume value.
 - ※ Adjusts menu values displayed on SETUP
 - ※ If no events for 3 seconds after adjusting value, setup menu automatically
- ⑤ **INFO** Displays screen information
 - ※ Displays interval value of slide show, version, file size, file name and etc.
 - ※ Converts replay mode when pressing INFO button once again.
- ⑥ **▶ ||** Play(active -> inactive)
 - ※ Enter Pause mode when pressing Play button in active mode.
 - ※ In Pause mode, refreshes up/down/right/left in every hour.
- ⑦ **■** Stop(inactive -> active)
- ⑧ **Numbers** Input numbers in OSD menu.

Basic setup


1. Initial Screen

- Insert power cord into AC power Socket
- Plug power cord into electrical outlet
- Turn on Power Switch
- Screen will light and display a Working Message
- If content has been previously loaded onto DOM (internal memory) content will play automatically

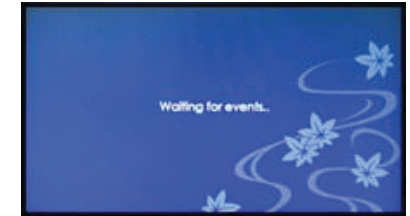

2. Screen setup

- Only available with remote control
- In Play mode, SETUP button changes OSD menu in order of Brightness > Contrast > Saturation
- If appropriate OSD menu displays, its value can change by VOL “+”, “-” button.
- If no events for 3 seconds after adjusting value, setup menu automatically disappears.

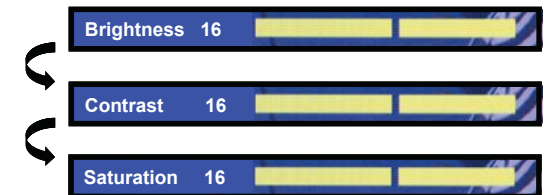

3. Volume setup

- Only available with remote control
 - In Play mode, “+” or “-” button shows volume setup menu.
 - Displayed volume value is the value after setup by “+” or “-” of VOL button
- Ex: If you press “+” button in volume value 16 initially set, displayed volume value can be 17.



Content Upload

Content Upload


- Image of download screen appears below.
- When preparing Content on USB Flash Drive please make sure only supported file formats reside
- Content will be read and transferred to the DOM(internal memory)
- When new content is loaded, old content will be erased automatically. Old content can also be cleared prior to new download using the remote control.
- Remote control and other functions are not usable during downloads.

<Automatic Download in progress >

Ongoing state of download

File size and number

File name

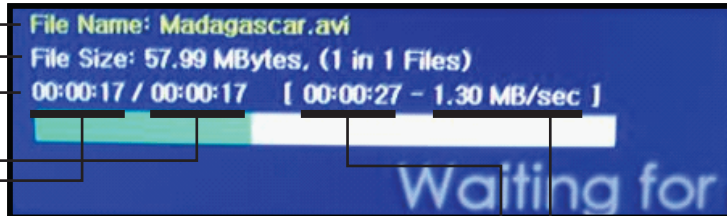


Download time of current File

Accumulated download time of all files

Estimated left time of current file

Download speed of current file
 
<Automatic Download finished>

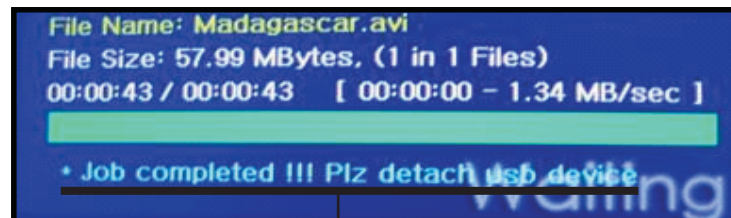

Remove USB device after this message -> Automatic restart and play.

Content Upload

How to upload content

1. Download content in a compatible file format from computer to a USB Flash Drive (see template below).

Compatible File Formats


AVI (MPEG 1/2/4, Xvid, Dvix)	Single File only not to exceed memory capacity
JPEG	Multiple Files, not to exceed memory capacity.

USB Flash Drive must contain only the compatible file/files for loading. Additional content can cause memory errors


Note: when using multiple JPEG files, files must be named sequentially

- ie: Flower01; Flower02; Flower03; etc.

2. Turn device on, if no content has been loaded screen will say "Waiting for events", if content has been previously loaded it will run automatically

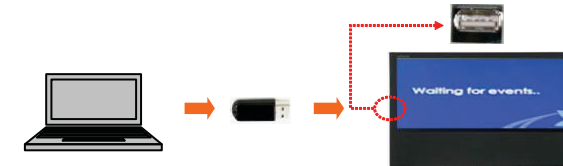

3. To load new content insert USB Flash Drive into USB port on device
4. Download will begin automatically (Old content will be deleted)
5. When download is complete screen will say "Plz detach USB device".

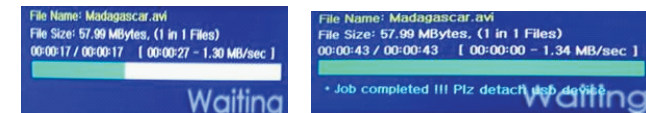

6. Once USB device is removed, system will reboot then automatically play new content. Screen will say "waiting for events" while reboot is in progress.

